

Set the dispensing amount

Page 1




By default, the device is set to 1.5 ml per spray.

Doses between 0.5 ml and 5.0 ml are possible



There is a small black button on the circuit board for adjusting the dosage

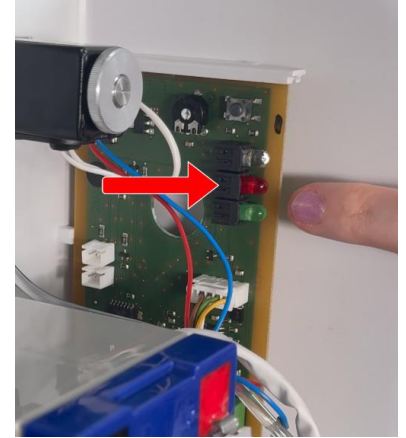

After pressing the button, the red LED flashes. Each flash represents 0.5 ml.



Each time you press, the dosage increases by 0.5 ml.

Listen for the 'click'



- 1 x = 0,5ml
- 2 x = 1,0 ml
- 3 x = 1,5 ml
- 4 x = 2,0 ml
- 5 x = 2,5 ml
- 6 x = 3,0 ml
- 7 x = 3,5 ml
- 8 x = 4,0 ml
- 9 x = 4,5 ml
- 10 x = 5,0 ml



Set the dosage amount as desired.

After flashing 10 times, the dosage will restart at 0.5 ml and flash once.

Adjust the spray pattern


Page 2



1. Unscrew the pump from the shoe



2. Remove the pump from the shoe

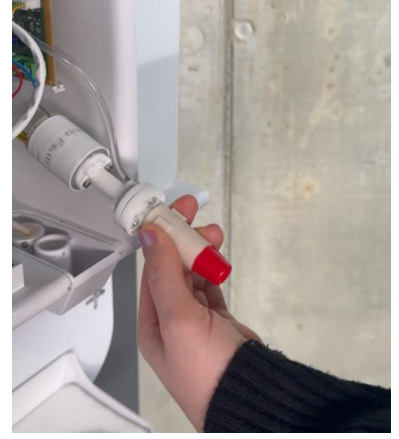

3. Tighten the red nozzle nut completely by turning it counterclockwise




4. Tighten the red nozzle nut back on by 1 ½ turns.

You can use the markings as a guide.



5. Test the spray pattern.

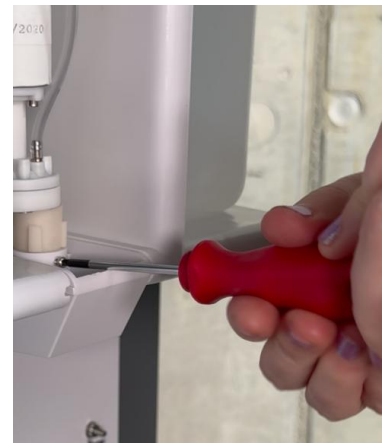

6. You can now reinstall the pump and tighten the screw.